

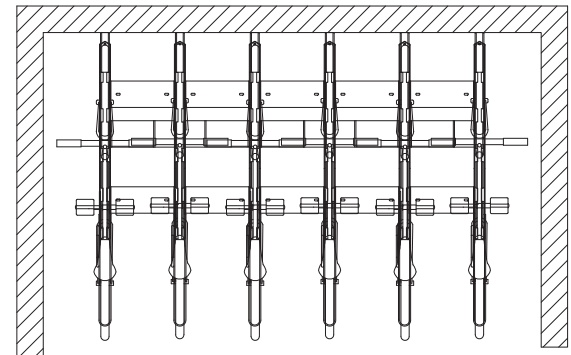



OBSTRUCTIONS BEYOND OKAY

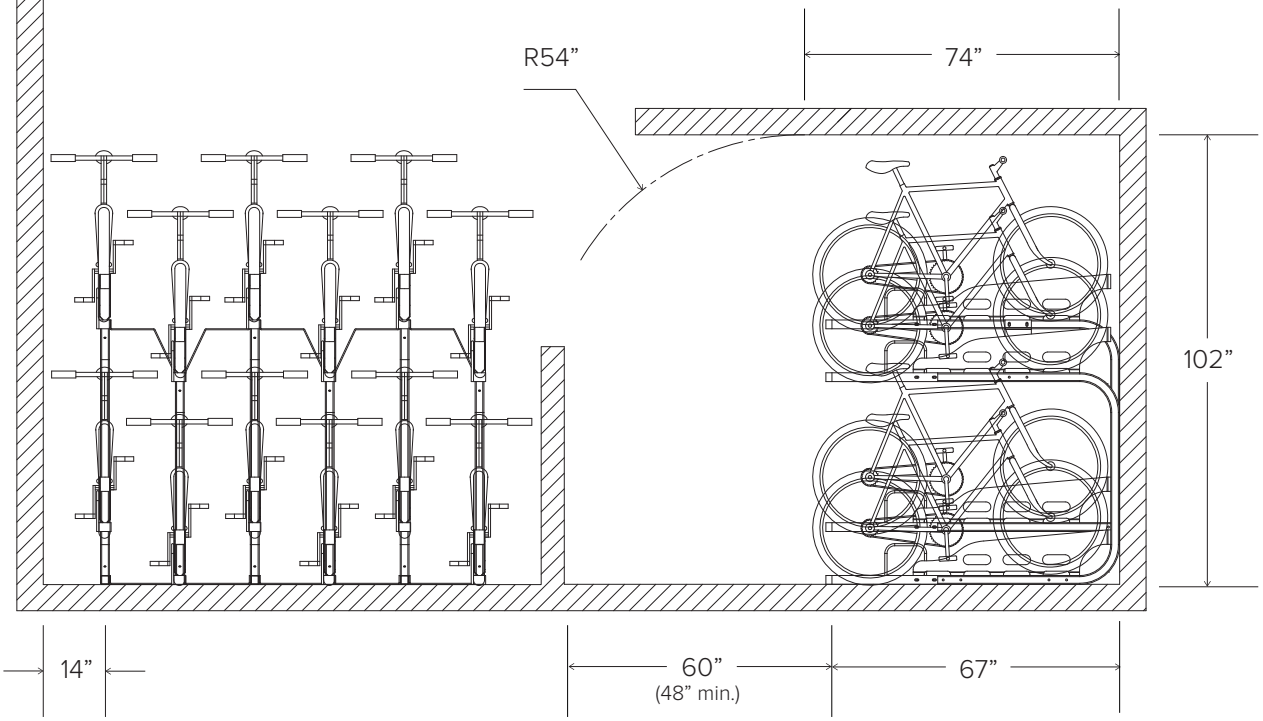



©2026

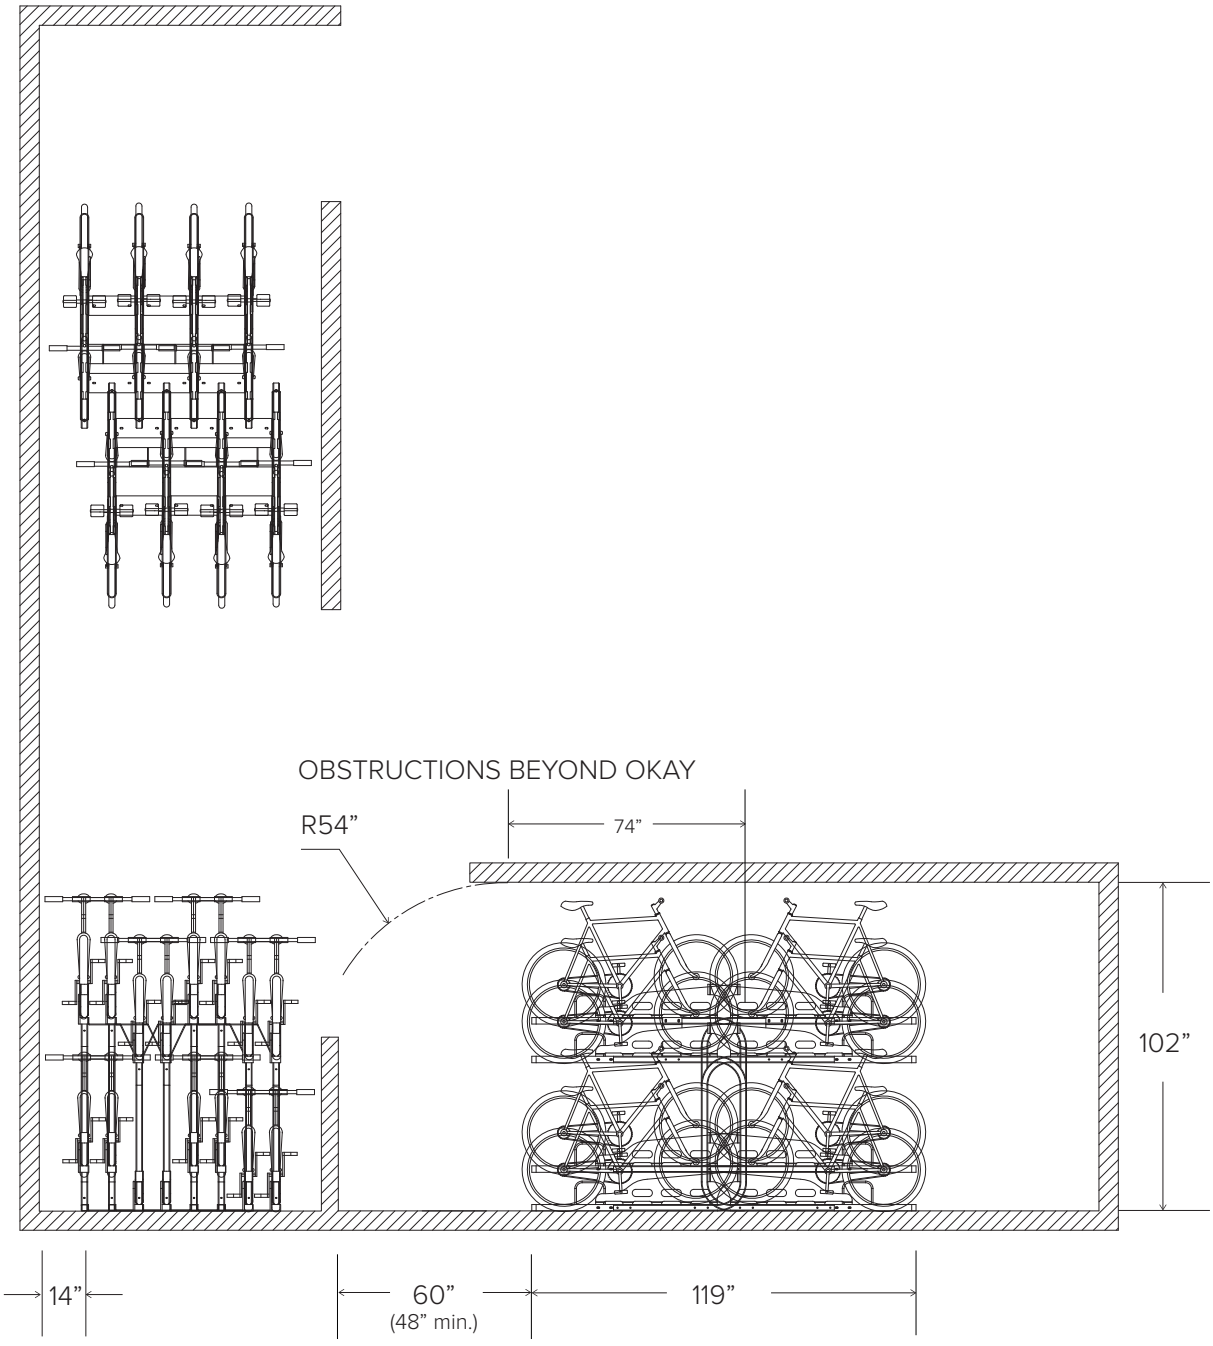




©2026

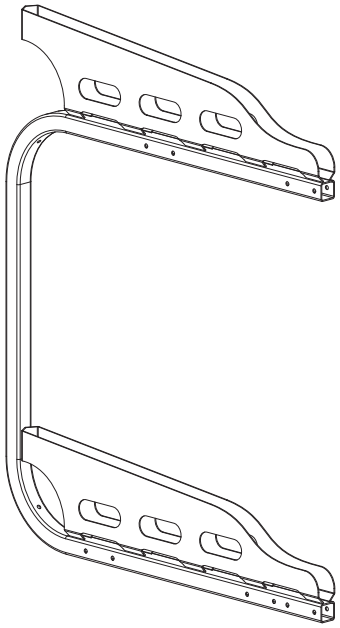


DUPLEX LOWER UNIT

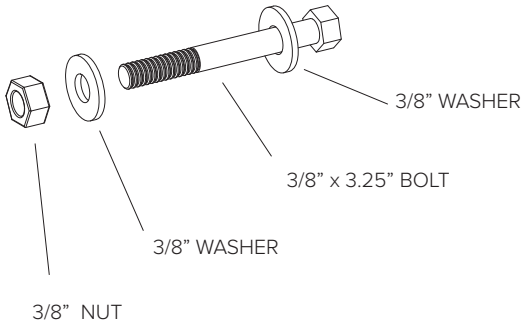

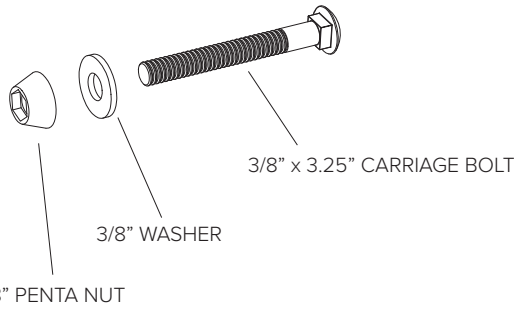


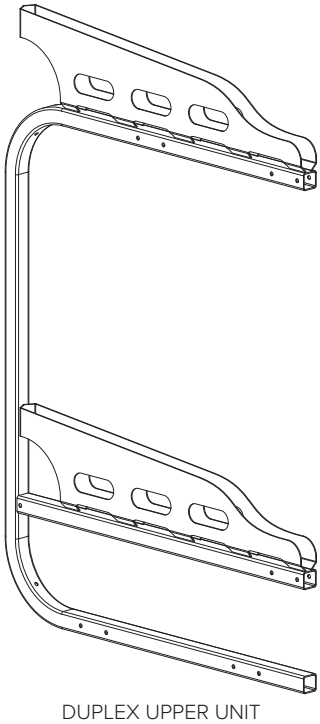
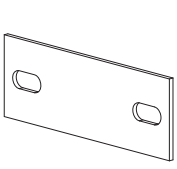
DUPLEX UPPER UNIT

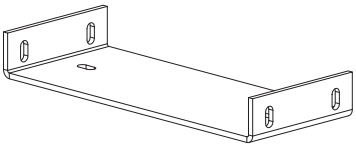


CONNECTOR BASE

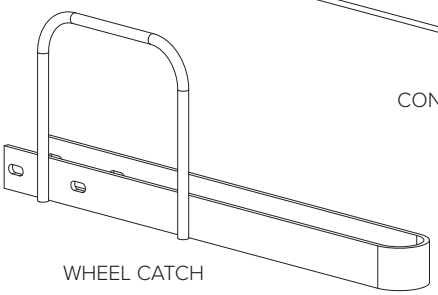

WHEEL CATCH



WHEEL CATCH SPACER

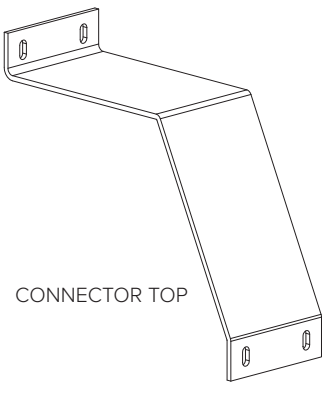


CONNECTOR TOP

©2026

**Scan code to view assembly video**


## 1

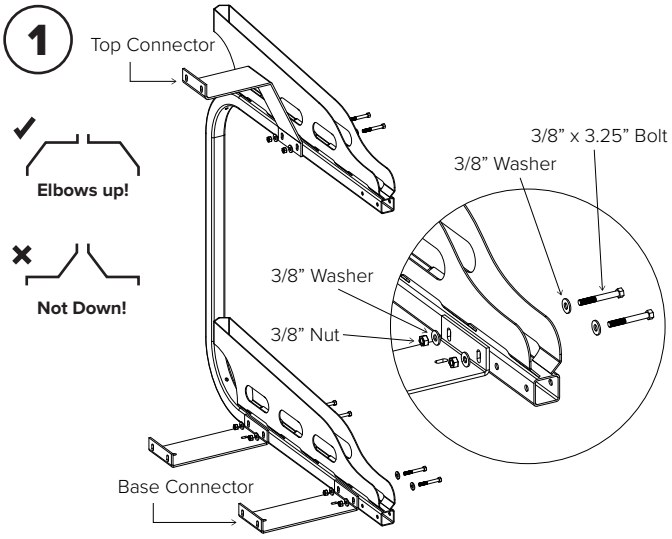


Place the first DUPLEX LOWER UNIT and attach CONNECTORS with hardware.


**Important: Top connectors need to be positioned with the “elbow” elevated to ensure handlebar clearance for bikes on the lower tier.**

## 2

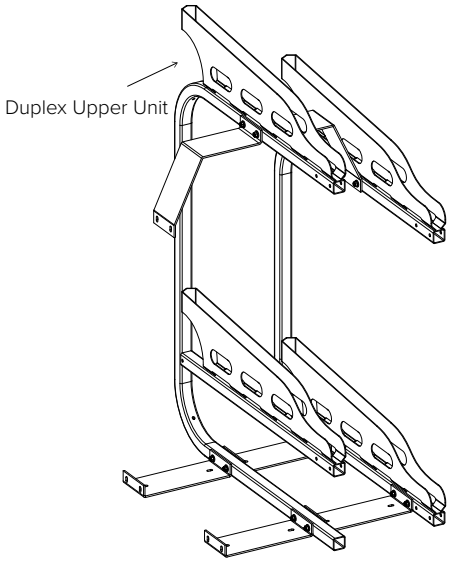


Place the next DUPLEX UPPER UNIT and CONNECTORS and attach with hardware


## 3

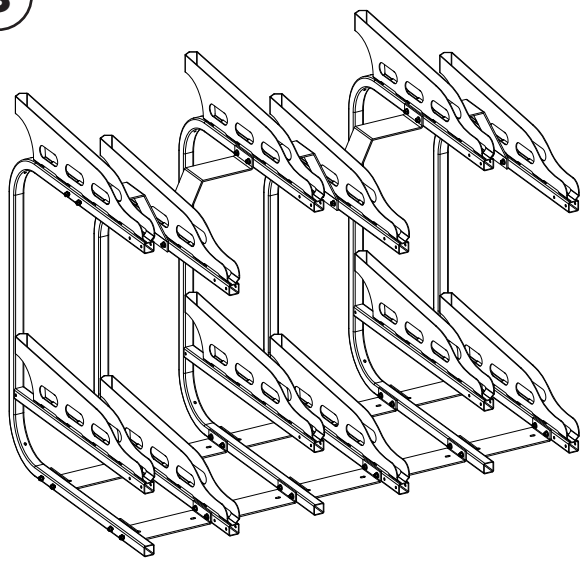

Continue repeating steps 1 and 2 as necessary.

## 4


⚠ Be sure to use (2) tamper-proof penta nuts to secure wheel catch.

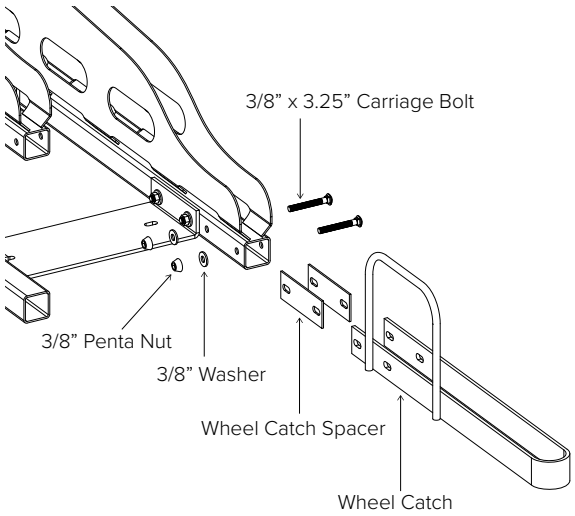


Place WHEEL CATCH and SPACERS and attach with hardware. Repeat for all trays.


©2026

**5**

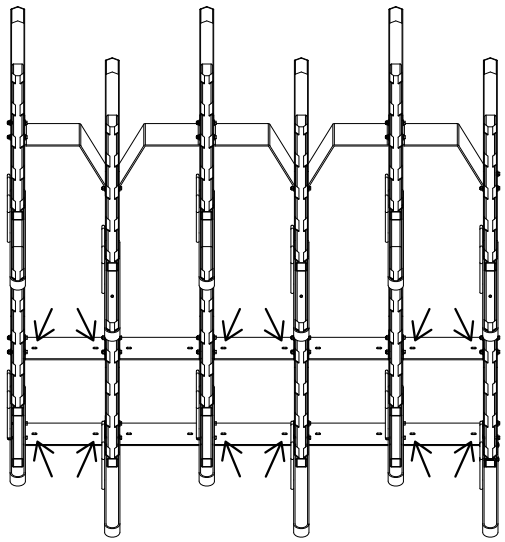

Secure the DUPLEX ASSMBLY with 3/8” WEDGE ANCHORS. Secure at the first and last pair of bases and then every other pair of bases.

**6**

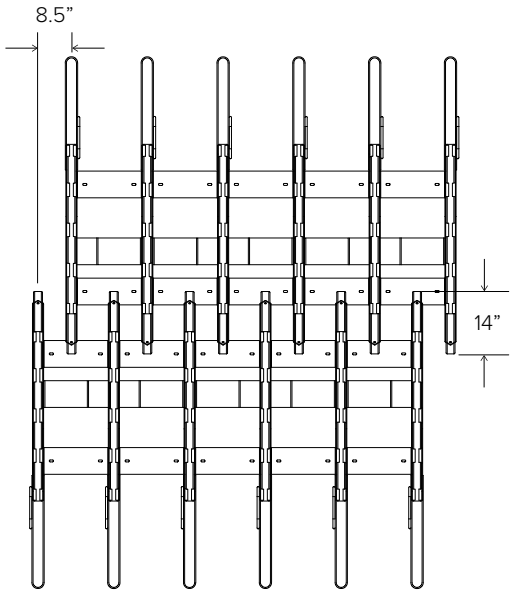


For double sided assemblies, simply place two single sided assemblies back to back with a 14” overlap.

©2026