
DERO
A PLAYCORE Company



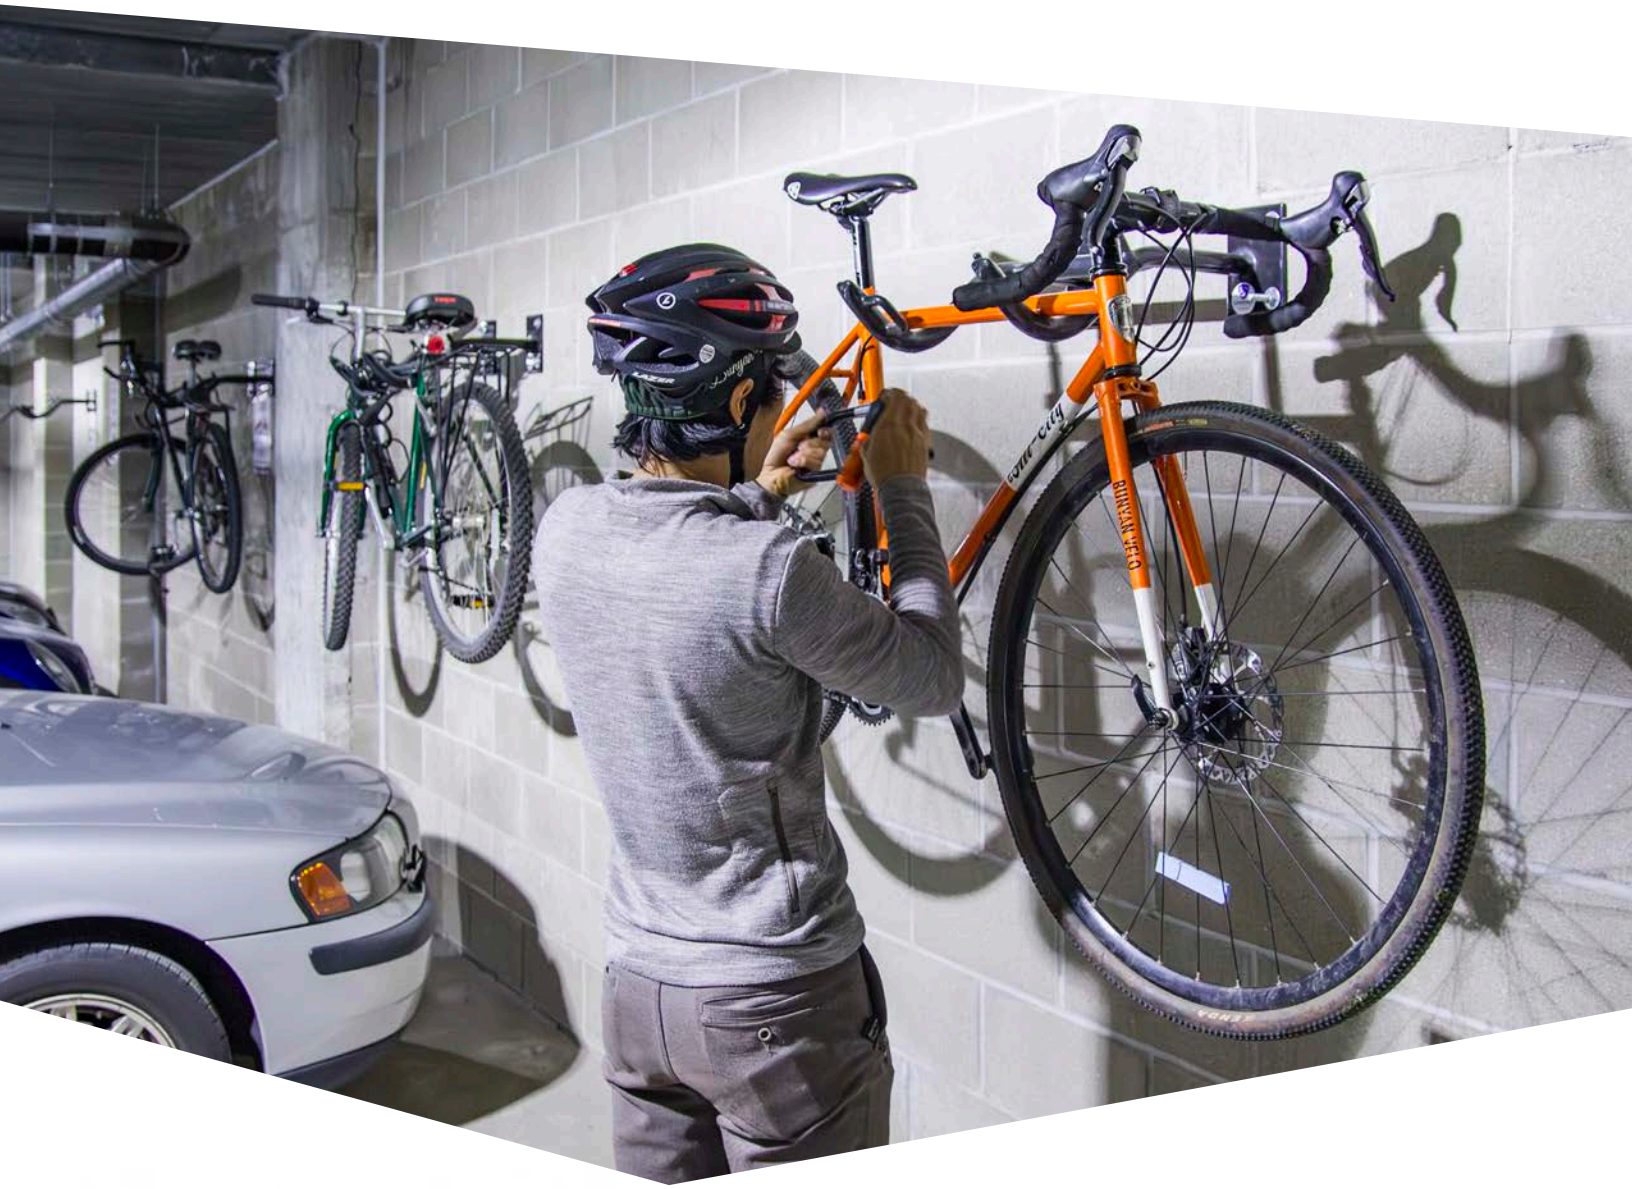

Wall Rack

Bike owners like this option as well for garage and home storage. The rubber coating keeps bikes from getting scratched. Two bikes can be hung up and locked securely, as the Wall Rack is fully U-Lock compatible. The Wall Rack keeps bikes off the ground and out of the way, and provides a secure, space-efficient way to store them.

©2026

Wall Rack


Shares nicely.

The Wall Rack is an ideal solution for indoor car parking stalls





Holds two bikes

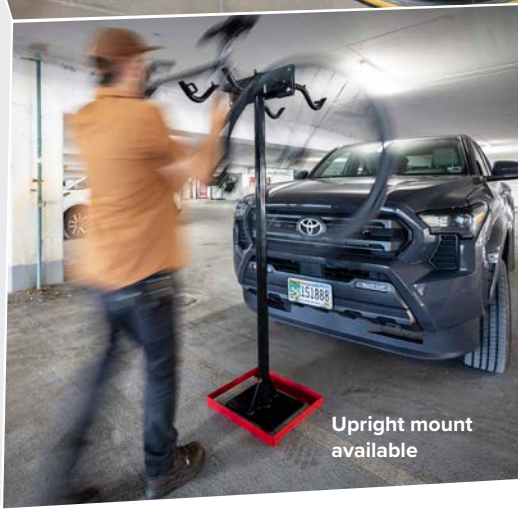

Upright mount available

Tamper-resistant fasteners available upon request

FINISH OPTIONS

PVC Dip



MOUNT OPTIONS

Wall



Upright




Single-Sided

Double-Sided

©2026

Wall Rack

Submittal Sheet

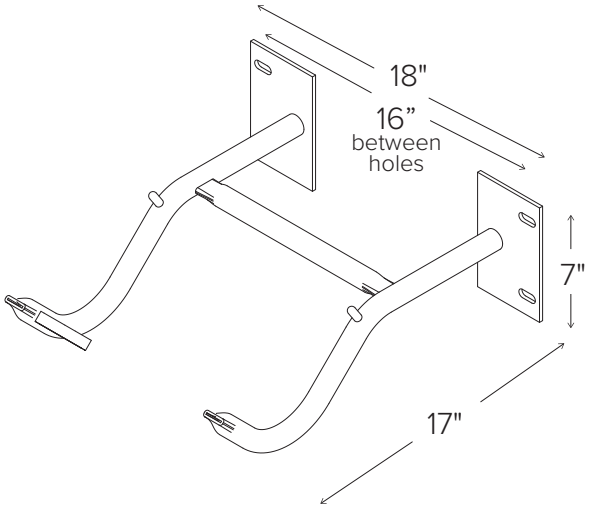

CAPACITY 2 Bikes

MATERIALS 1” OD 11 gauge tube

FINISHES

☐ **Black Rubber Dip (plastisol)**

MOUNT OPTIONS


☐ **Wall Mount**
Wall mount has two 3.75” x 6” foot plates set 16” apart with 4 fasteners. Can be set into concrete block, solid concrete, bricks, wood studs and other base materials. Tamper-resistant fasteners available upon request.

☐ **Upright Mount**
One or two Wall Racks may be installed on a 73” tall upright. Includes tamper-resistant fasteners. Upright is powder coated black.


- ☐ **Single-Sided**
- ☐ **Double-Sided**


ADA CANE STOP

☐ **Add Cane Stop**
This accessory adds a 2” high cane-detectable base for improved safety. The cane stop for the upright mount is powder coat only. The cane stop for wall-mounted racks is galvanized with red and white stripe warning tape applied.




©2026

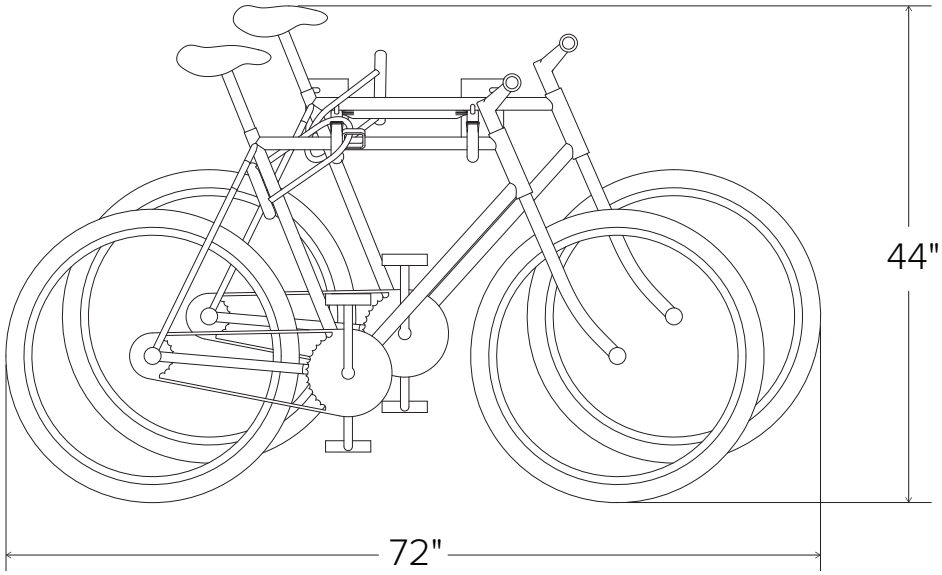

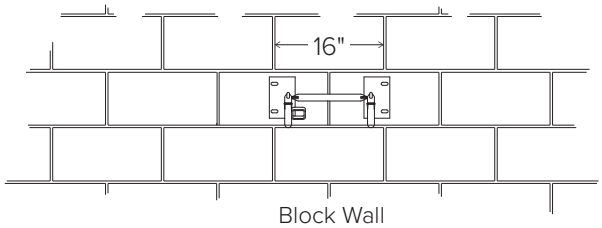


Block Wall

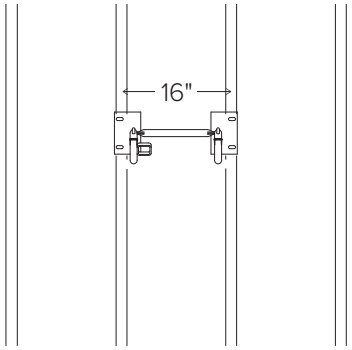


Stud Wall

Parking Stall Configuration

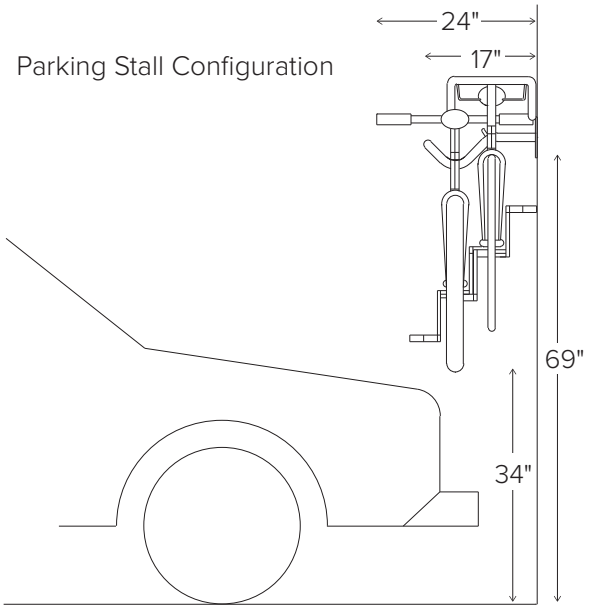


Wall Racks cannot be stacked on top of each other


©2026

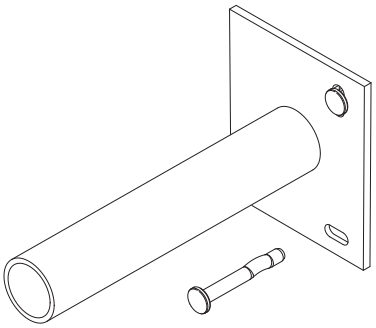

Concrete Spike

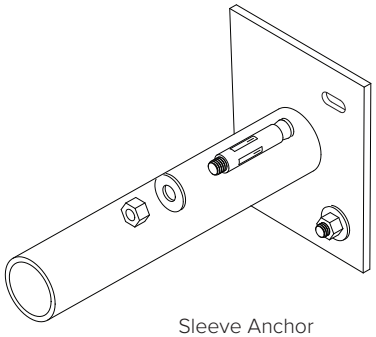


Sleeve Anchor

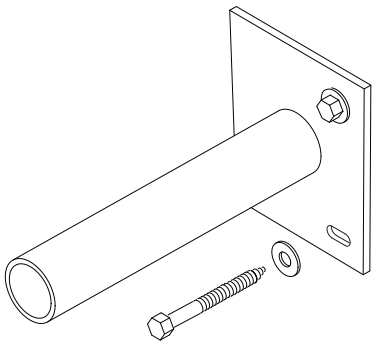

Lag Screw
(wood install)



Titen Anchor



Wedge Anchor

©2026


TOOLS NEEDED

Tape Measure
Marker or Pencil
Masonry Drill Bit
Drill (Hammer drill recommended)
Hammer
Wrench or ratchet 9/16”
Level

RECOMMENDED BASE MATERIAL


Solid concrete is the best base material. Brick, block, and wood stud walls may be acceptable. Metal stud walls are not an acceptable material for installation. Before installing make sure nothing is behind the wall that could be damaged by drilling and that the base material is strong enough to support a fully loaded rack. Tell your Dero representative what kind of base material you are installing the Wall Rack into so the proper anchors can be shipped with the rack.

1

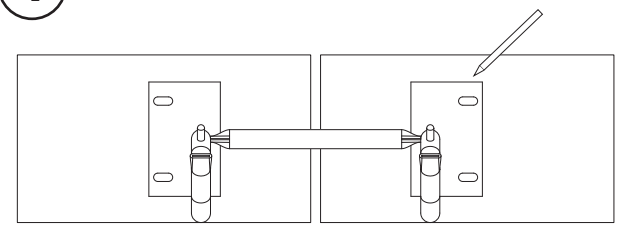

Place rack against wall, lining up the holes with the center of the concrete block. Mark holes and lower rack.


2

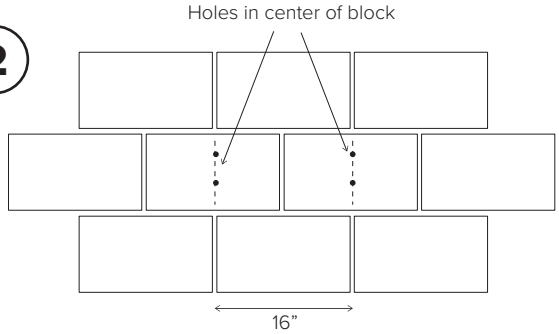

Sleeve anchors: Drill holes 2” deep with 1/2” diameter drill bit.
Wedge anchors: Drill holes 3” deep with 3/8” diameter drill bit.
Lag screws: Drill holes 3” deep with 9/32” diameter drill bit.
Titen anchor: Drill holes 3” deep with 3/8” diameter drill bit.
Concrete spikes: Drill holes 3” deep with 3/8” diameter drill bit.


If installing more than one Wall Rack, mark holes for each rack individually as there may be slight differences in the placement of holes from rack to rack.

3

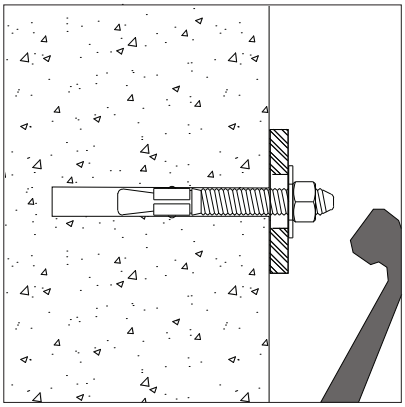

Place rack back into positon against wall and tap anchors through holes in the rack and into the wall.


4

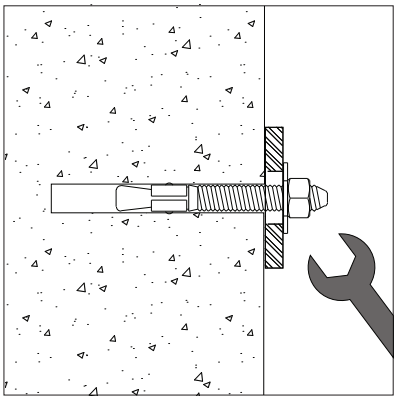

Tighten anchors

OPTIONAL ADA CANE STOP

Install cane stops in line with or within 4” back from the farthest protrusion of the rack from the wall.

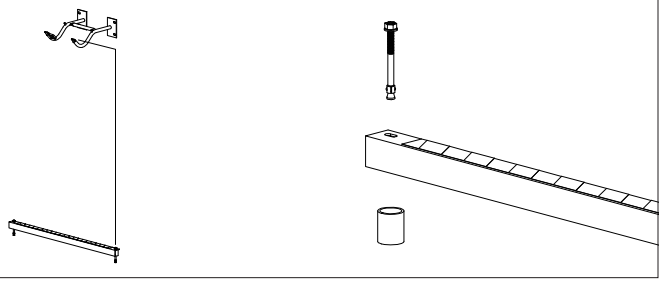

©2026

Installation - Upright Mount

TOOLS NEEDED


Tape Measure
Marker or Pencil
Masonry Drill Bit
Drill (Hammer drill recommended)
Hammer
Wrench or ratchet 9/16”
Level

RECOMMENDED BASE MATERIAL

Before installing make sure the base material contains nothing that could be damaged by drilling and is strong enough to support a fully loaded rack. If installation surface contains post-tensioned cables, special anchors will be required.


Two people recommended for installation.

1

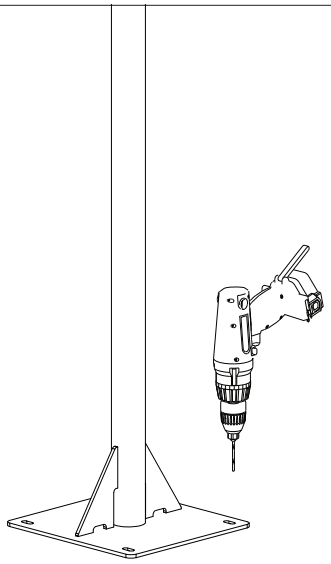


Place the Wall Rack upright in the desired location. Using the base as a template, drill the appropriate anchor holes based on the anchor type used.

2

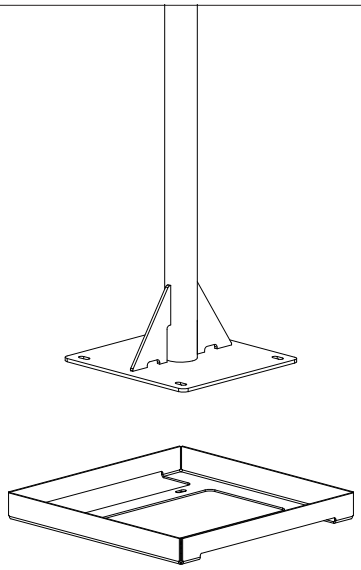


If using an ADA can stop device, add this under the upright’s baseplate and anchoring hardware.

3

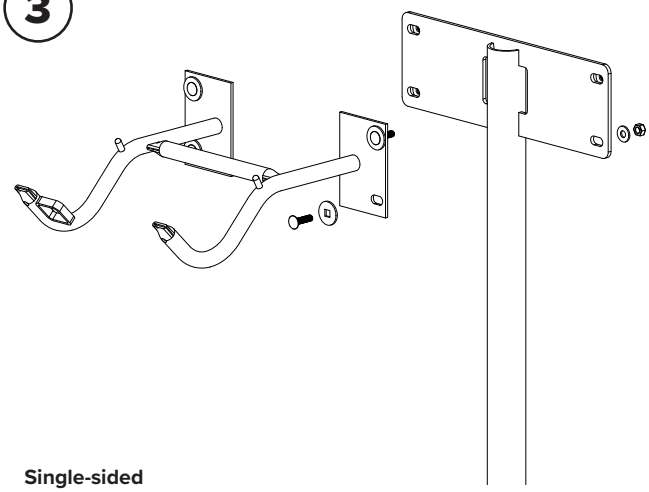

Single-sided

Place the Wall Rack in position and secure with (4) 3/8” carriage bolts, carriage washers, standard washers, and nuts. (2) of the nuts will be Penta nuts.

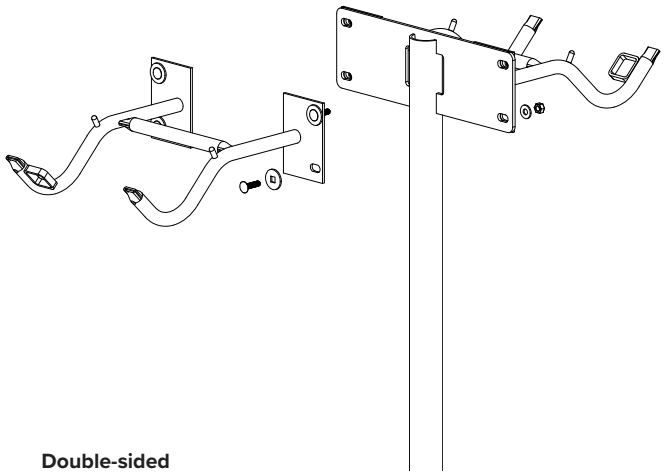

Double-sided

For double-sided installations, place a second Wall Rack on the other side of the upright before adding the standard washers and nuts.

©2026